


Anziehvorschrift Zylinderkopf
Tightening Instructions for Cylinder Head
Instructions de serrage pour culasse
Prescripciones de apriete para culatas

986.390
 passend für / suitable for
 adaptable à / adaptable a
Fiat



Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
 Tête de vis / Cabeza de tornillo

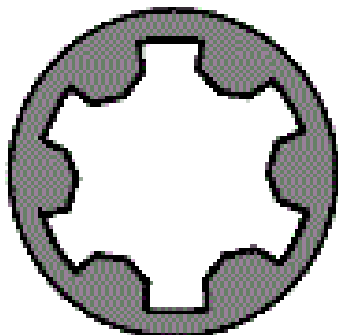

760.510
 M 12x1,25x134

8	6	2	5	10
7	3	1	4	9
14	12	11	13	15

Anziehen/ Tightening/ Serrage/ Apriete	M 12 50 Nm 100 Nm 90° 90°	M 8 30 Nm
---	---------------------------------------	--------------

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 83 mm; ÷: 1,95 mm

Mot: AR 33601, AR 67501
 146.B2.000, 146.D7.000, 149.A1.000,
 149.B1.000, 149.B3.000, 149.B4.000,
 149.B4.046, 160.A6.000, 160.A6.046,
 160.A7.000, 160.B6.046, 160.D1.000,
 176.A3.000, 176.A5.000, 176.B3.000,

Elring-Serviceteam
 Fon +49 7123 724 799
 Fax +49 7123 724 798
service@elring.de

26/06/29

986.390