

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

774.855


passend für / suitable for
adaptable à / adaptable a

BMW




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

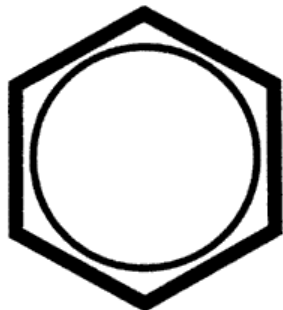

802.720
M 12x1,75x157

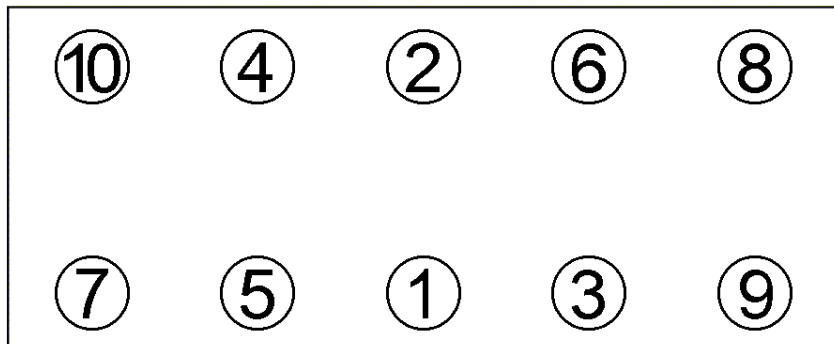

Anziehen/
Tightening/
Serrage/
Apriete

- ⊙ 58 - 62 Nm
- 15 min
- 30° - 36°
- * 25 min
- 20° - 30°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. M10/M20 B18/B20 $\div 1,8(+0,3)$ mm

1800, 2000, 2000C,CS,ti,tii,tilux

1802, 2002, 2002tii, 2002ti,tii, 2002turbo

E21 316, 318, 318i, 320, 320i

E30 316, 316i, 318i

E12 518, 518i, 520, 520i

E28 518, 518i

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

774.855