

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

B14.300

passend für / suitable for
adaptable à / adaptable a

Fiat




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



C56.390
M 11/M 15

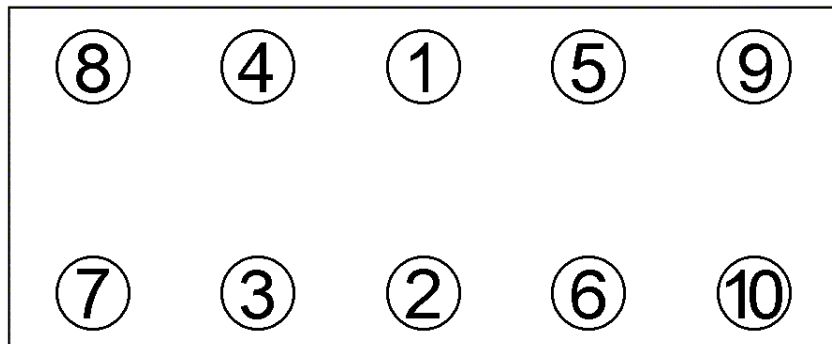

Anziehen/
Tightening/
Serrage/
Apriete

- Pos. 1-10
- Pos. 1-6
- Pos. 1-6
- Pos. 7-10
- Pos. 1-6
- Pos. 7-10

50 Nm
100 Nm
90°
60°
90°
60°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,2 mm, Ø 88,5 mm

2.3 Turbo Diesel Fiat/Iveco

Fiat Ducato
Iveco Daily

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/29

B14.300