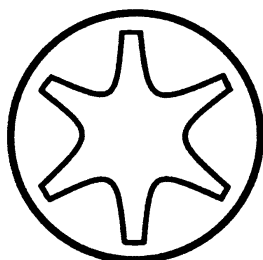
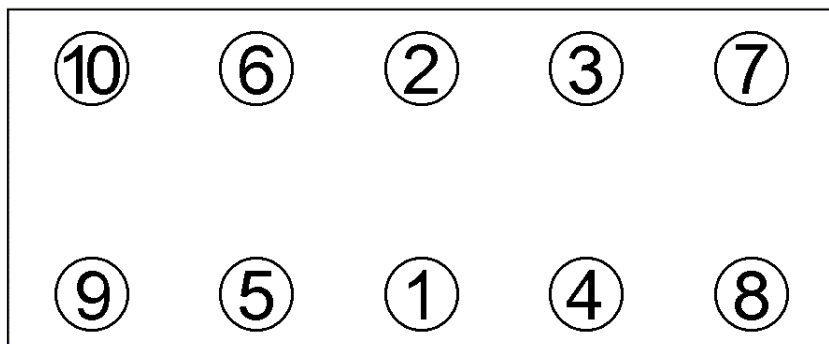


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****645.842**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo803.010
M 11x1,25x105Anziehen/
Tightening/
Serrage/
Apriete 25 Nm
 > 90°
 > 90°
 > 90°**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 83 mm; ÷: 1,3 mm

Mot: C 18 XE, C 18 XEL, X 18 XE
4 Zyl., 1,8 l (DOHC)16V,
85/92 kW (115/125 PS)

Opel Astra 3/1993>

Elring-ServiceteamFon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/25

645.842