


Anziehvorschrift Zylinderkopf	529.690	 Das Original
Tightening Instructions for Cylinder Head	passend für / suitable for	
Instructions de serrage pour culasse	adaptable à / adaptable a	
Prescripciones de apriete para culatas	Daihatsu	

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

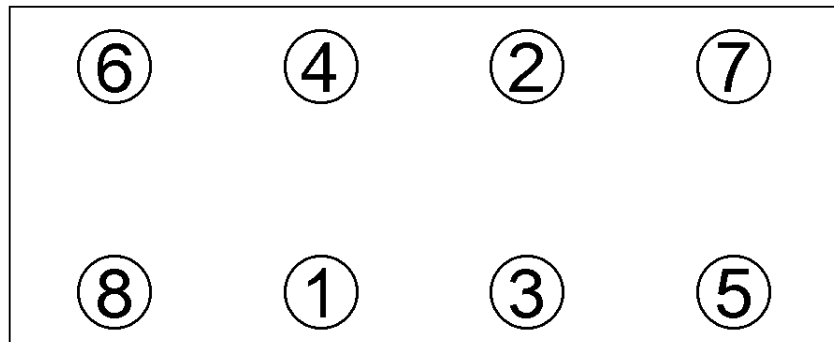

Anziehen/
Tightening/
Serrage/
Apriete

MC: CL 10
 85-95 Nm

MC: CL11
 83-93 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Charade II (G11, G30) 10.83-03.87

MC CL10, 1,0D 27 KW

Charade III (G100, G101, G102) 03.87-12.92

MC CL11, 1,0D 27 KW

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

529.690