

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

460.970


passend für / suitable for
adaptable à / adaptable a

FORD




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

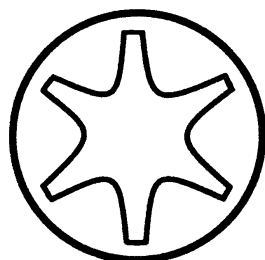

087.830
M 10x1,5x143

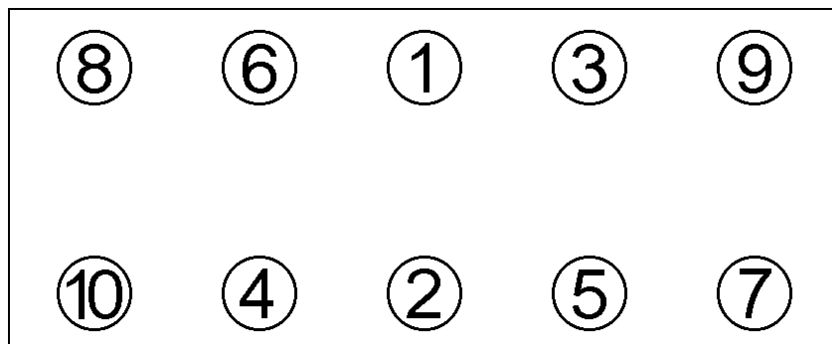

Anziehen/
Tightening/
Serrage/
Apriete

5 Nm
15 Nm
35 Nm
➤ 90°
➤ 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 80 mm; ÷: 0,6 mm

Mot: BNMA; M8DA; M8DB; UNCD; UNCC; M8MA
UNCK; UNCM; UNCJ; UNCA; UNCF; UNCE; UNCB; UNCI
UNCH; UNCG; M9DA; M9DB; M9MA; M9MC
1,5 ltr. EcoBoost 88; 110; 118; 132; 134 KW
Kuga; Mondeo; Focus; C-Max; S-Max

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/25

460.970