

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

793.491

passend für / suitable for
adaptable à / adaptable a


BMW




Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

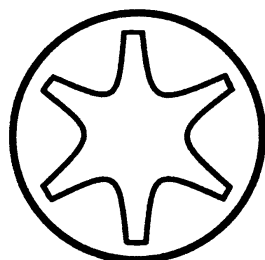

794.480
M 11x1,5x188

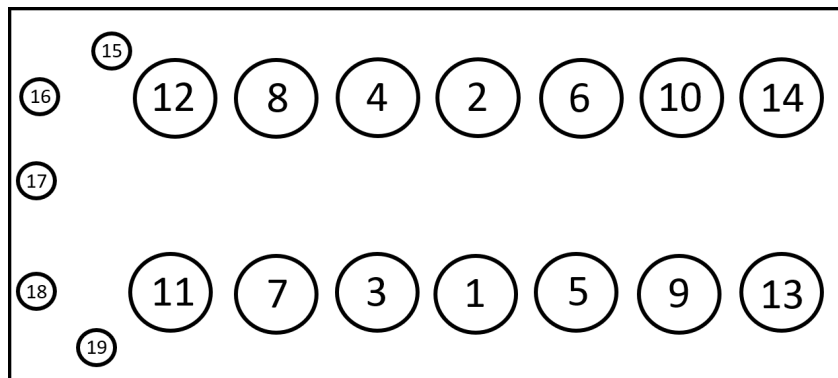

Anziehen/
Tightening/
Serrage/
Apriete

Pos. 1-14 (M11)
30 Nm
➤ 90°
➤ 180°

Pos. 15-19 (M8)
19 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 0,81 mm, Ø 82,0 mm

Mot.: B58 B30 B / B58 B30 C
3,0 Ltr

BMW: 3´G20/G21 M340i
5´G30/G31 540i
7´G11/G12 740i

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/25

793.491