

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

809.760


passend für / suitable for
adaptable à / adaptable a

Opel




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

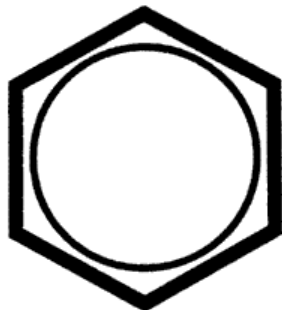

803.050
M 12x1,5x102

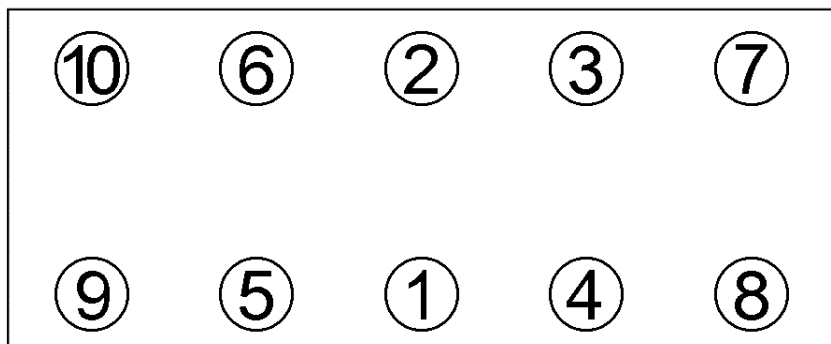

Anziehen/
Tightening/
Serrage/
Apriete

Y17DT/Y17DTL

- 20 Nm
- 40 Nm
- 60°
- 13°
- 60°
- 13°

Z17DTH/Z17DTL

- 15 Nm
- 39 Nm
- 60°
- 60°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. Y17DT, Y17DTL, Z17DTL, Z17DTH

Corsa C, Astra G, Astra H, Meriva

÷ 1,45 mm (3 Loch/hole)

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

809.760