

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

475.480

passend für / suitable for
adaptable à / adaptable a

Mercedes-Benz




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



372.940
M 12x1,75x205

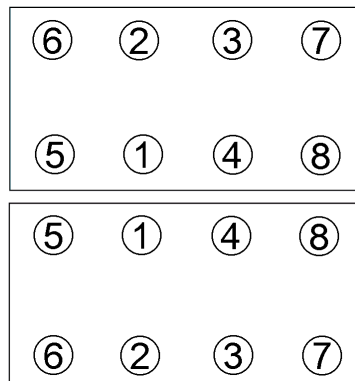

Anziehen/
Tightening/
Serrage/
Apriete

M 12
10 Nm
60 Nm
➤ 90°
➤ 90°
➤ 90°

M 8
20 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 83,8 / 1,2 mm rechts/right

Mot: OM 642.820, 822, 850, 870, 910, 930, 940,
950, 960, 990, 992, 993

280CDI/320CDI/350CDI

W211, W212, W221, W164, X164, W251,
W204, W639, C219, C209, A209, 906

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/25

475.480